


Data

Cutout point (heating water pump off)	26 °C (79 °F)
Cut-in point (following cutout)	16 °C (61 °F)

Removal

- 1 Remove glove box (68—140).
- 2 Remove hose from heater box to lateral vent at the right.
- 3 Pull electrical flat plug from temperature switch (21).
- 4 Unscrew two screws on temperature switch (21) and pull temperature switch out of evaporator housing.

- | | |
|--|---|
| 6 Amplifier | 40 Vacuum element center jet |
| 9 Blower | 43 Vacuum element main air flap |
| 18 Double contact relay | 44 Vacuum element fresh air-recirculated air flap |
| 21 Temperature switch for heating water pump | 50 Air jet nozzle |
| 38 Specified leak point | |

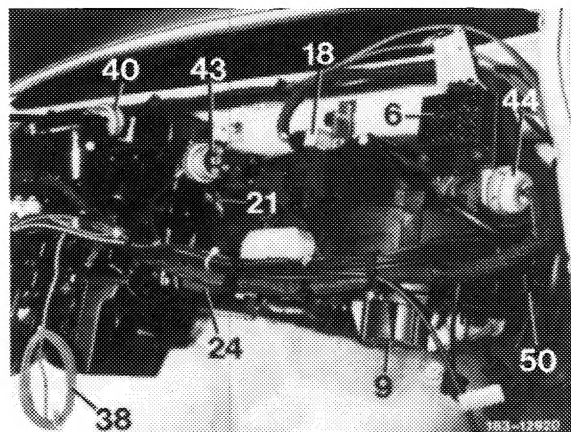

Installation

- 5 Plug temperature switch (21) into evaporator housing and attach with two screws.
- 6 Mount electrical flat plug and check temperature switch (21) together with heating water pump for function.
- 7 Mount air hose for lateral ventilation.
- 8 Install glove box (68—140).